



Care instructions

for your ultragloss or ultratouch kitchen

When cleaning we recommend you DON'T USE:

Cleaning products with an alcohol content, (often found in glass cleaners.)
Scouring and abrasive cleaning materials will damage the gloss surface.

For daily cleaning we recommend you use;

A damp cloth with warm water then wipe the remaining moisture off with a dry cloth. Household cleaners like Mr Muscle can be used providing the instructions say suitable to clean Acrylic. Vibrance Acrylic cleaner (available from Plumbers merchants,) is recommended.

Any liquid spillages must be wiped off immediately. Carefully wipe spillages off the inside back of doors / drawers and from joins in cabinets.

Occasional cleaning

We recommend using Vuplex Plastic cleaner and anti-static polish to clean, protect and polish the gloss finish on the acrylic. The anti-static repels dust particles.

More information available from www.vuplex.com.au

Product available from NZ distributor;

Radar Direct Ltd, 0800 4RADAR, 0800 472 327



February 2015